

## Bondo® Original Filler

Bondo® Original Filler is an all-purpose, two-part filler compound used for interior or exterior repairs for home or auto. Fill dents, dings, and scratches on your car or around your home. The easy-to-use filler shapes in minutes and is formulated to be non-shrinking. This fast-curing two-part filler allows you to make high-quality, permanently durable repairs.


Additional Product Safety and Health Information Source: Safety Data Sheet (24-2445-5) or call 1-800-494-3552. For more content, training videos and product information, visit [Bondo.com](http://Bondo.com).

### Project Ideas

- Automotive restoration
- Dent repair
- Smoothing out fiberglass repairs

### Surfaces

Metal, aluminum, masonry, concrete, and more.

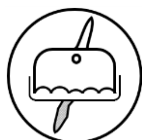

#### Workable

3 to 4 min



#### Cure/Sand time

20 min



#### Waterproof

No



#### Stainable

No



#### Paintable

Yes



#### Type of Hardener

Blue cream (included)



#### Color when cured\*


Light Blue

\*if mixed properly



### Safety


Use this product only with adequate ventilation and always wear appropriate personal protective equipment (eye, skin, respiratory and hands). Refer to Safety Data Sheet for more information. Make sure to read and understand all safety information on the product before using.

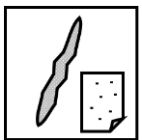

### Surface preparation

Clean all surfaces with soap and water followed by a low VOC compliant cleaner. Allow to dry.

Sand the damaged area with 80 grit sandpaper to remove all paint, primer, and rust down to bare metal. Sand 1-2 inches beyond damaged area. Clean again with a low VOC compliant cleaner.

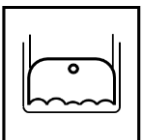

### Mixing


Stir the filler before using. Knead the hardener tube. For a 3-inch diameter puddle of filler, squeeze out a 3" long strip of hardener. This is the maximum recommended amount to mix at any given time for optimal application. Mix thoroughly to a uniform color on a clean, non-porous surface. When product is mixed, the working time is 3-4 minutes. Do not add hardener directly into the filler container.



### Application

Spread an initial thin layer of the mixed filler over the repair area using firm pressure to ensure maximum adhesion. Apply additional layers of filler as needed. Allow filler to cure 20 minutes.

For best results apply at 45°F (7°C) or above.

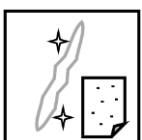

### Finishing

Rough shape the filler with 80 grit sandpaper. Finish sanding with 180 grit and finer. Featheredge the repair. Wait 45 minutes and apply 2-3 coats of primer to cover the repair area.

Apply Bondo® Glazing and Spot Putty to fill in small imperfections and re-prime with 2-3 coats. Follow paint manufacturer's recommendation for priming and final finishing.